ELECTRIC FAN
OPERATING INSTRUCTIONS
MODEL: R-804

READ AND SAVE THESE INSTRUCTIONS

CAUTION
Read Rules for Safe Operation and Instructions Carefully.

WARNING
1. Do not leave the fan running unattended.
2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
3. Ensure that the fan is switched off from the supply mains before removing the guard.
4. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION
1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window, rain may create electrical hazard.
6. Indoor use only.

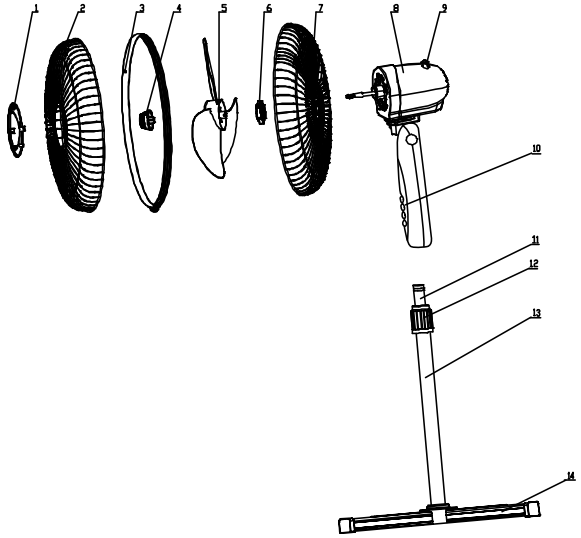

PARTS NAME
1. Centre Piece
2. Front Guard
3. Plastic Guard Clip
4. Blade Nut
5. Blade
6. Plastic Nut
7. Back Guard
8. Motor
9. Oscillating Knob
10. Speed Regulator
11. Internal Pole
12. Height adjustment ring
13. Column
14. Cross

COLUMN ASSEMBLY
1. Attach column to stand with 4 screws as shown.
2. Unscrew / take out height adjustment ring.
3. Slide stand ornament down the column to rest on stand.
4. Pull out the extension pipe and screw / fasten the height adjustment ring back.

CAUTION: Height adjustment ring must be fully fastened before the assembly of the motor section to the stand.

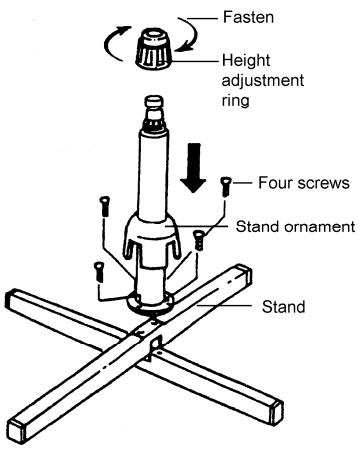

ASSEMBLY INSTRUCTIONS
1. Unscrew the spinner clockwise and the nut counter- clockwise to remove both of them.
2. Set the rear guard in the proper position with handle up.
3. Screw on plastic nut tightly to attach rear guard.
4. Discard plastic sleeve on motor shaft.
5. Install the fan blade onto the motor shaft until it reaches the retaining pin.
6. Screw spinner onto motor shaft counter anti-clockwise to blade.
7. Mount the Front Guard and join both Guards together using the Clips.

OPERATING INSTRUCTIONS

1. To make / stop the fan head oscillate, push down / pull up the clutch knob.
2. The airflow can be adjusted upward or downward by loosening the tilt adjustment knob and adjusting the vertical angle as desired. Retighten knob securely.
3. The height of the fan can be adjusted by loosening the Height Adjustment Ring carefully raising or lowering the fan and firmly re-tightening the ring.
4. Speed is controlled by depressing the piano keys.
   4 position: OFF L-low M-medium H-high
5. Plug the power supply cord into a wall outlet.

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, do not plug the pins into the socket.
2. To ensure adequate air circulation to the motor. Keep vents at the rear of the motor housing away from dust, fluff and etc. Do not disassemble the fan unless you have remove fluff.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner, bending.
4. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste.
It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving form inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.